

Epson TM-88 Advanced Printer Driver Configuration

Table of Content

1. Download and Install Drivers.....	2
2. Printer Port Settings	4
3. Barcode configuration	6
4. Cash Drawer Configuration.....	7
5. Cash Register Printer Configuration.....	9

1. Download and Install Drivers

- a. Epson Drivers can be downloaded from www.microtelecom.com
- b. From the download menu, select "Drivers"
- c. Enter Password "mtcpos"
- d. Save to your hard drive or select "Run"
- e. Select Operating System in figure 1-1
- f. Select Epson TM-T88IV Receipt or Epson TM-T88III in Figure 1-2

Figure 1-1: Select Operating system


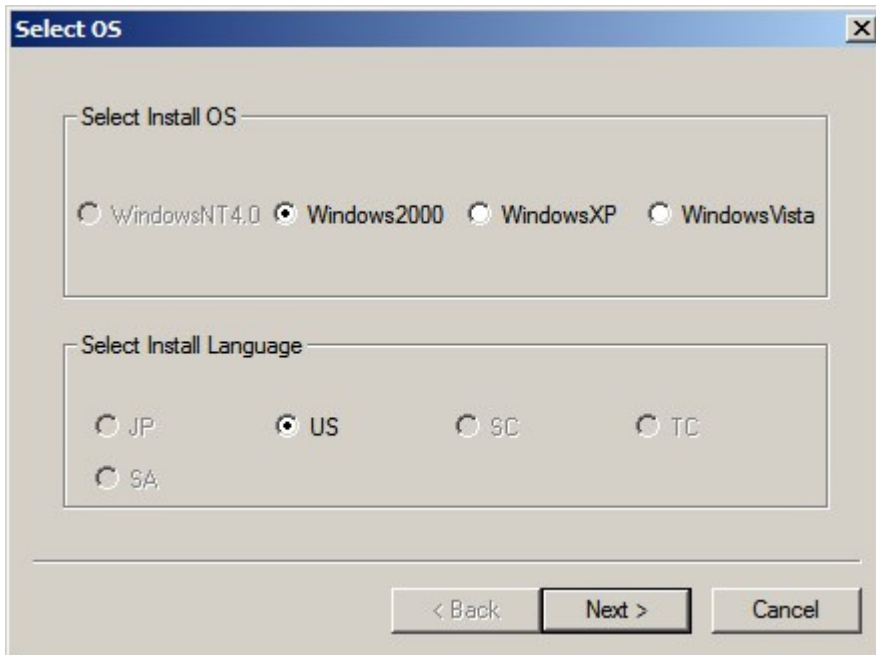 


Figure 1-2: Select Printer

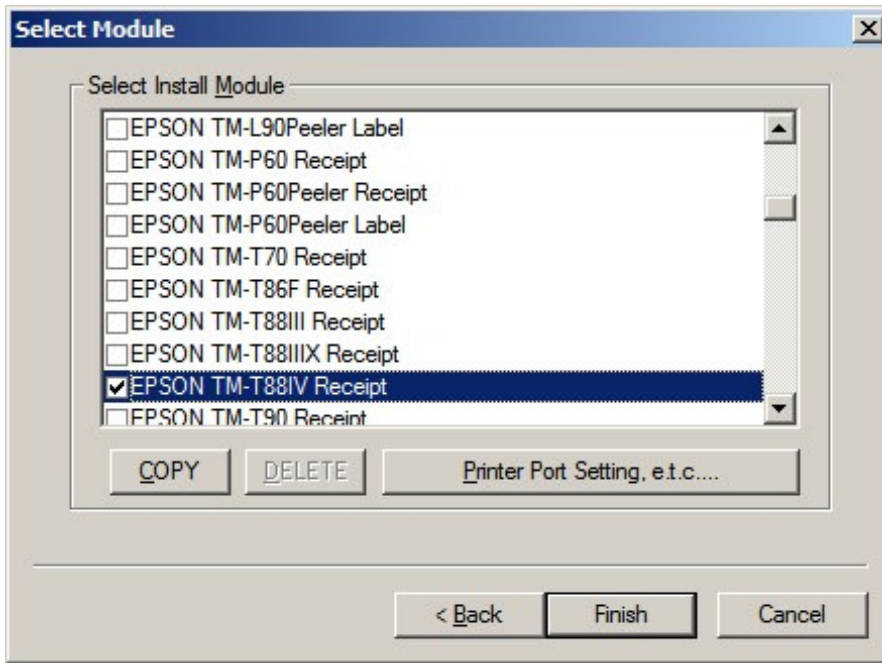 


2. Printer Port Settings

Figure 2-1: Set Printer Port Settings.


Most new POS printers are **USB**.

 Please make sure you select the correct type of Port for your printer.

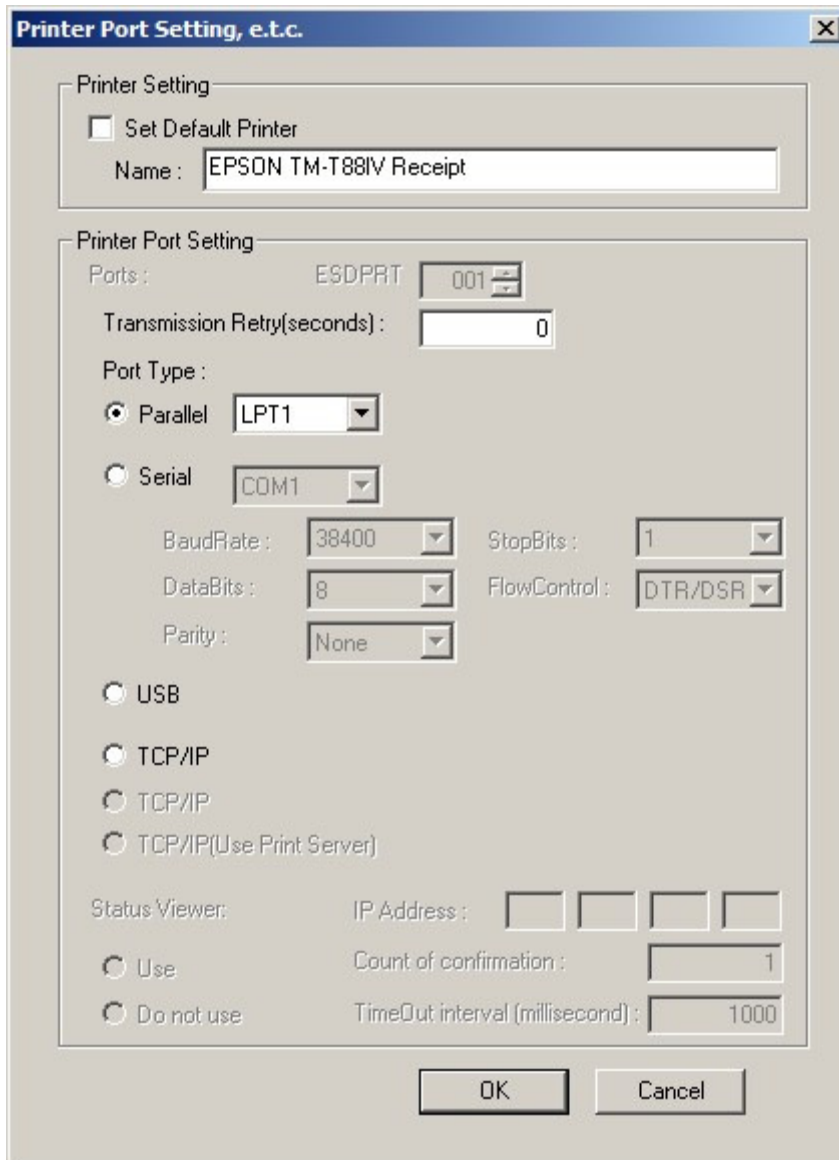


The printer will now be installed.

 Figure 2-2

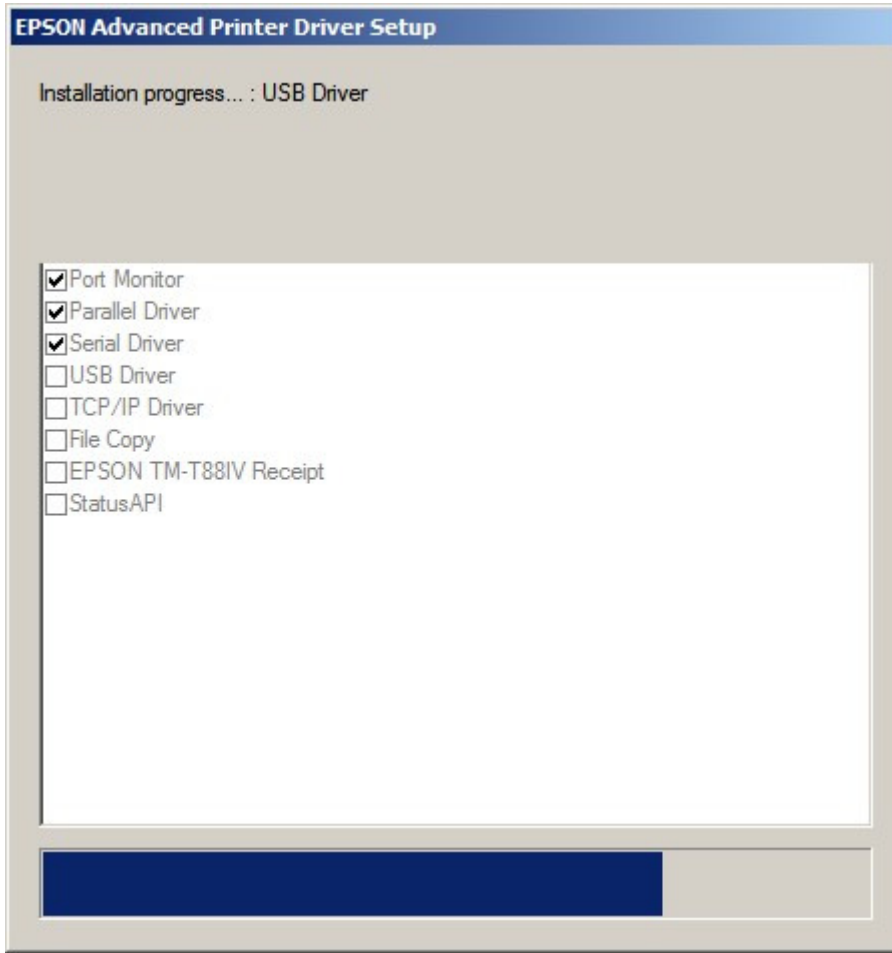

You may need to restart your computer for the printer driver to load and port configuration changes to take effect.

 
Figure 2-3

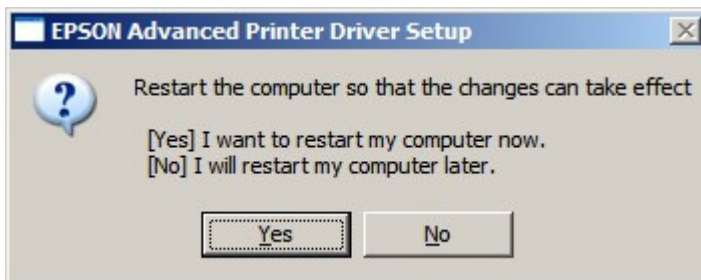

3. Barcode configuration

- a. Open windows printer settings screen
- b. Right click on the Epson printer and select properties.
- c. Navigate to the barcode tab
- d. Change Barcode type to Code39
- e. Change HRI position to “Above the barcode”
- f. Click “Apply”

 Figure 3-1

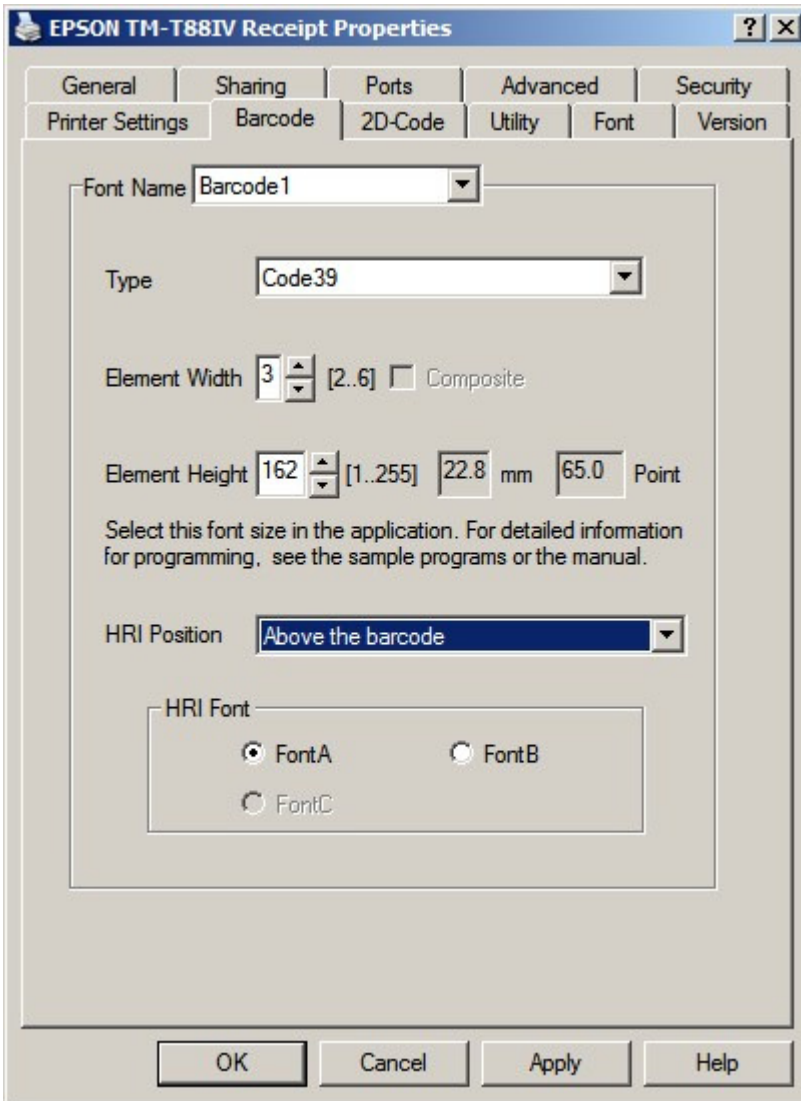

4. Cash Drawer Configuration

From the same properties screen, click on “Operation” tab.
Click on “End of Document” in Figure 4-1

Figure 4-1


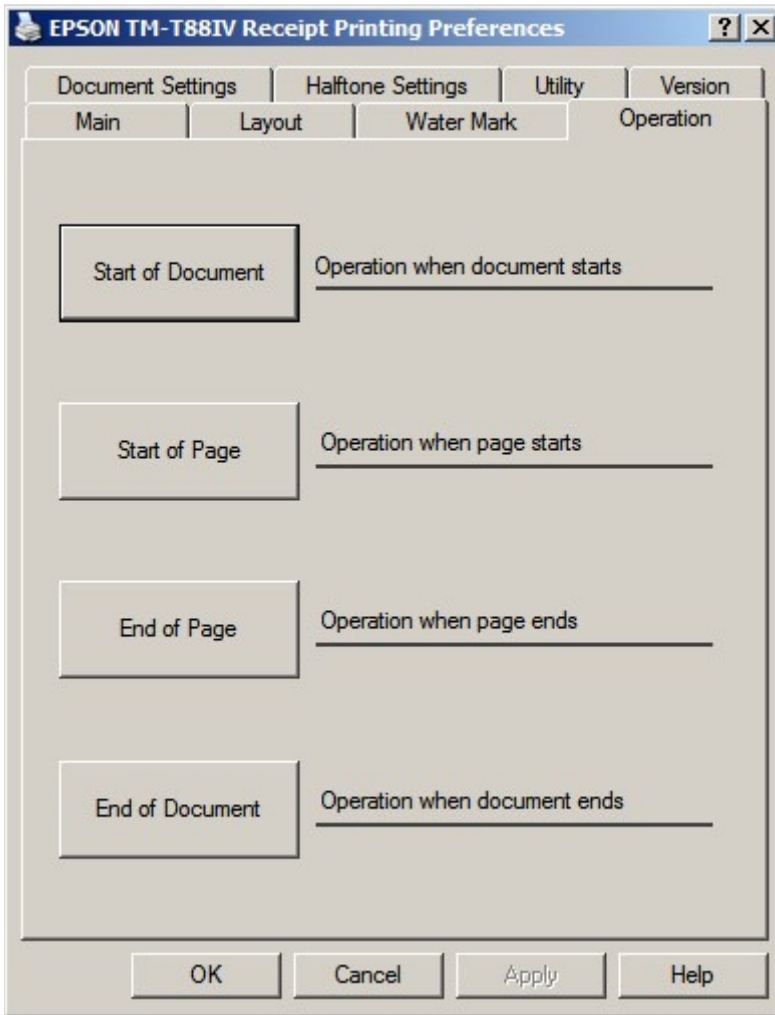 


Figure 4-2

 - a. Change the drawer to “Open drawer 1”, depending on your printer
- b. Connectivity with the cash register you may be required to select “Open Drawer 2”.
- c. Change the paper cut option to Partial cut.
- d. Click Apply.

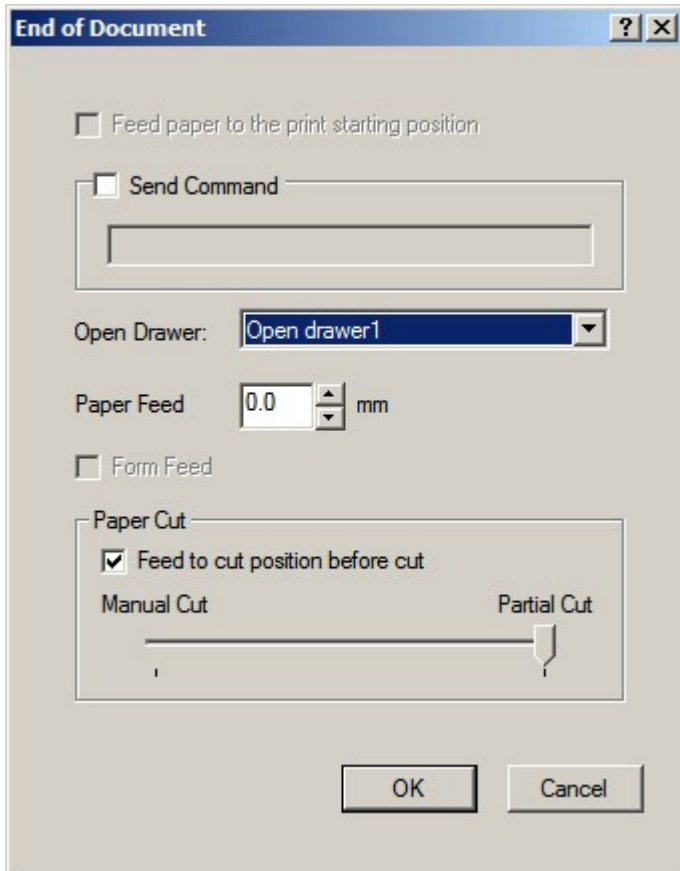

5. Cash Register Printer Configuration

POS will designate for each Cash register the receipt printer. When CSR select a cash register the printer will be assigned for the POS client. To assign a printer for a cash register follow these steps:

- a. Click on Maintenance
- b. Select POS Settings
- c. If you did not already select a register, the POS will prompt to select one.
- d. Select Register Print Options
- e. Set the Register Default Printer
- f. Select “always use this printer in POS”
- g. Select “Epson TM ADV” control set
- h. Click Save.

Figure 5-1 Register Printer Configuration

POS Register Settings [Register (mtvm200)]

Register Printing Options	Register Peripherals
<input checked="" type="checkbox"/> Print Bar Code on Receipt	<input checked="" type="checkbox"/> Always use this printer in POS: Print Test
<input type="checkbox"/> Send Paper Cut Command	POS Printer: EPSON TM-T88IV Receipt
<input type="checkbox"/> Print Two Copies	Printer Driver Control Set: EPSON TM ADV
<input type="checkbox"/> Only Item/Amount on 2nd Copy	Cash Register Connect Via: Printer Test
<input checked="" type="checkbox"/> Auto Print Receipt	<input type="checkbox"/> Register require 1-2 sec delay to open
<input type="checkbox"/> Open Drawer before Printing	
<input type="checkbox"/> Open Cash Drawer on Check/Credit Sales	
Font: FontA11	
Receipt Font Size: 8	
Receipt Paper Width (3850): 3850	
Save Settings	Exit